

288 SERIES Full Circle Golf Rotor

NOZZLE INSTALLATION GUIDE

STEP 1: REMOVE DRIVE ASSEMBLY

STEP 2: INSTALL NEW NOZZLE

- Twist off nozzle/cap (counterclockwise).
- Pull off nozzle assembly.
- Snap in correct nozzle.
(see Performance Chart).



FOR WINDY CONDITIONS

- Turn short range nozzle to vertical position to improve distribution patterns.

NORMAL



 
WINDY



STEP 3: RE-INSTALL DRIVE ASSEMBLY

- Place new assembly in body.
- Install new snap ring.
- Reinstall nozzle/cap assembly.
(twist on clockwise).

**NOTE: Cap is self-tightening,
no need to overtighten.**



288 Series Performance Data (U.S.)						
	#37 RED	#40 BROWN	#45 GREEN	#50 BLACK	#57 BLUE	
Base Pressure (psi)	Radius (ft)	Flow (gsm)	Radius (ft)	Flow (gsm)	Radius (ft)	Flow (gsm)
60	67	33.2	65	34.3	67	36.8
70	73	36.1	73	38.6	76	41.7
80	77	48.1	79	50.6	85	52.5
90	73	36.1	75	42.6	83	45.9

288 Series Performance Data (Metric)						
	#37 RED	#40 BROWN	#45 GREEN	#50 BLACK	#57 BLUE	
Base Pressure (bars)	Radius (m)	Flow (l/s)	Radius (m)	Flow (l/s)	Radius (m)	Flow (l/s)
4,1	20.4	2.1	7.5	19.8	2.2	7.8
4,8	22.4	2.3	8.2	22.2	2.4	8.8
5,5	23.4	3.0	10.9	24.0	3.2	11.5
6,2	22.2	2.3	8.2	22.8	2.7	9.7